

# LAST CHANCE ARCHERY

## Ultra Lock Adapter

*Product warnings and instructions*



### Parts Included:

- Left bracket

- Right Bracket

# WARNINGS:



***READ ALL INSTRUCTIONS BEFORE INSTALLATION  
AND USE OF YOUR ADAPTER SET.***

**<http://lastchancearchery.com/videos/>**

Visit the link above, or by scanning the QR code above, for a detailed instructional video on the Ultra Lock Adapters assembly and use.

Ultra Lock Adapters **MUST ONLY** be used on Last Chance Archery, LLC built bow presses and will not be warranted for use on any other press.

The Ultra Lock Adapter is designed and tested for pressing the Hoyt Ultra Flex Limb system™ only. Using the ULA on any other bow types will be at the owner's own risk; and LCA can not be held liable for injuries or damages caused by pressing any other bow type.

**Press springsteel is sharp and can cut your hand while installing ULA, be cautious.**

***Disassembly, modifications and/or tampering of any kind, to any LCA product, will void all warranties.***


**Step #1.** Remove your adapters from the box and check to be sure all parts are included. Upon removal from the box, you'll notice the adapter set is fully assembled and ready to go.

**Step #2.** Check your LCA finger block screws to be sure they're tight, then read all warnings and cautions before using your Ultra Lock Adapter set to avoid injuries or damage to your bow.



**Step #3.** Take the right bracket of your ULA set and attach it onto the LCA finger block. (as shown in steps A,B,C).


**Step #4.** Take the left bracket of your ULA set and attach it onto the opposite LCA finger block. Be sure that the brackets seat firmly onto the LCA block pin (C).

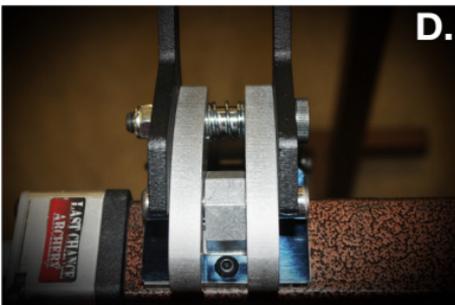

The ULA is equipped with a compression spring to keep all the parts tight and solidly in place for ease in use (D).

***WARNING: Spring Steel is Sharp, Use Caution.***

**Step #5.** Once your ULA brackets are securely attached to your press. You can press the bow by putting the limbs inside the left adapter first (A). This will make the bow easier to manage while you then fit the bow into the right adapter (B) using the press wheel or actuating press motor (D). Move the press in slowly as to insure proper fit and alignment (as shown in steps A,B,C,D).

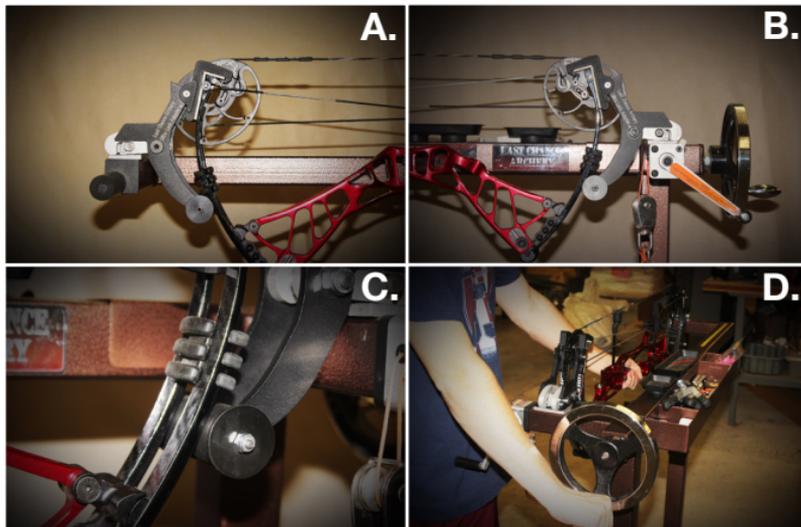

**Step #6.** Note that the ULA rollers are supposed to touch the limbs of the bow when being pressed. These rollers are designed and engineered to touch the limb precisely to lock the bow into place once pressure is applied (C).

**LAST CHANCE ARCHERY, LLC**  
619 Hubert Pittman Rd  
Pendergrass, GA 30567  
Customer Service: 706-654-1961  
or [sales@lastchancearchery.com](mailto:sales@lastchancearchery.com)